


## BMW Universal Transmitter

The BMW Universal Transmitter provides a convenient way to replace up to three hand-held transmitters with a single built-in device. This innovative feature will learn the radio frequency codes of most current transmitters to operate garage doors, entry door locks, estate gates and security systems. With the available accessory package, the Universal Transmitter can also control home or office lighting. For reliability, the Universal Transmitter is powered by your vehicle's battery and charging system.

### Programming

**CAUTION:** Before programming, read the **Precautions** section.


1. Turn the ignition on to the second position.
2. Hold down the two outside buttons on the BMW Universal Transmitter until the indicator light begins to flash (20-30 seconds). Then release the buttons. This procedure initializes the memory and erases any previous settings on all three channels.

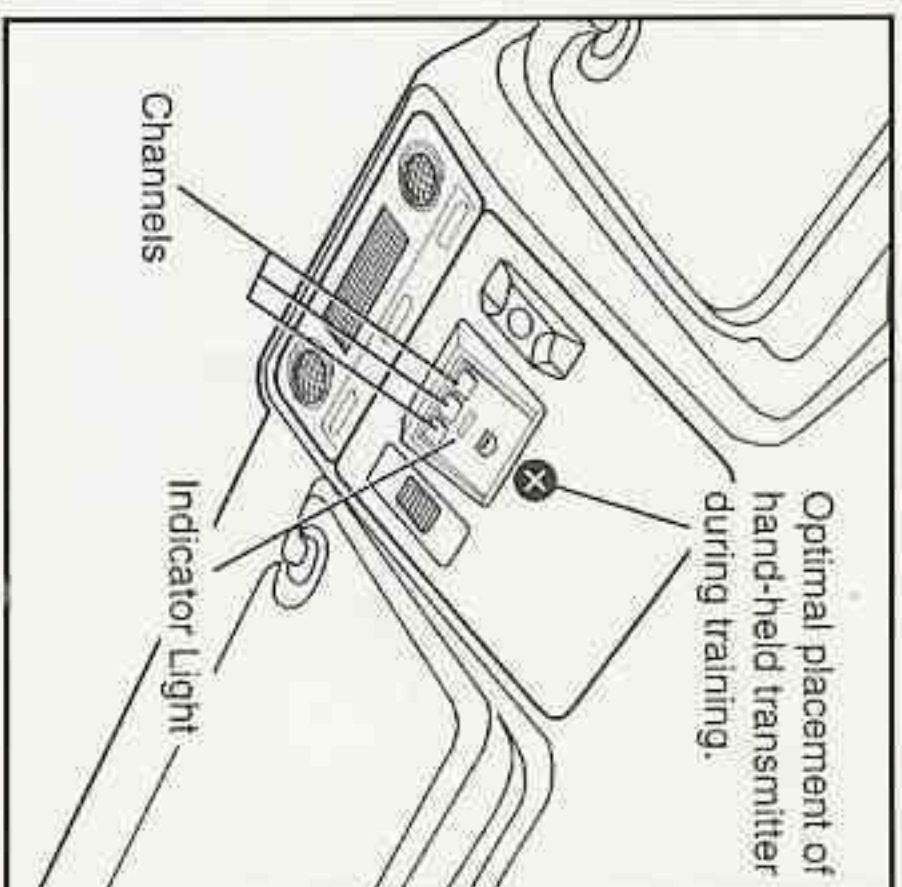

3. Hold the end of your hand-held transmitter against the front surface of the BMW Universal Transmitter so that you can still see the indicator light.

4. Using both hands, push the hand-held transmitter button and the desired button on the BMW Universal Transmitter. Continue to press both buttons through step 5.

5. Hold down both buttons until you see the indicator light on the BMW Universal Transmitter flash, first slowly and then rapidly. It indicates that you have successfully programmed the Universal Transmitter to learn the new frequency signal. Release both buttons once the rapid flashing begins.

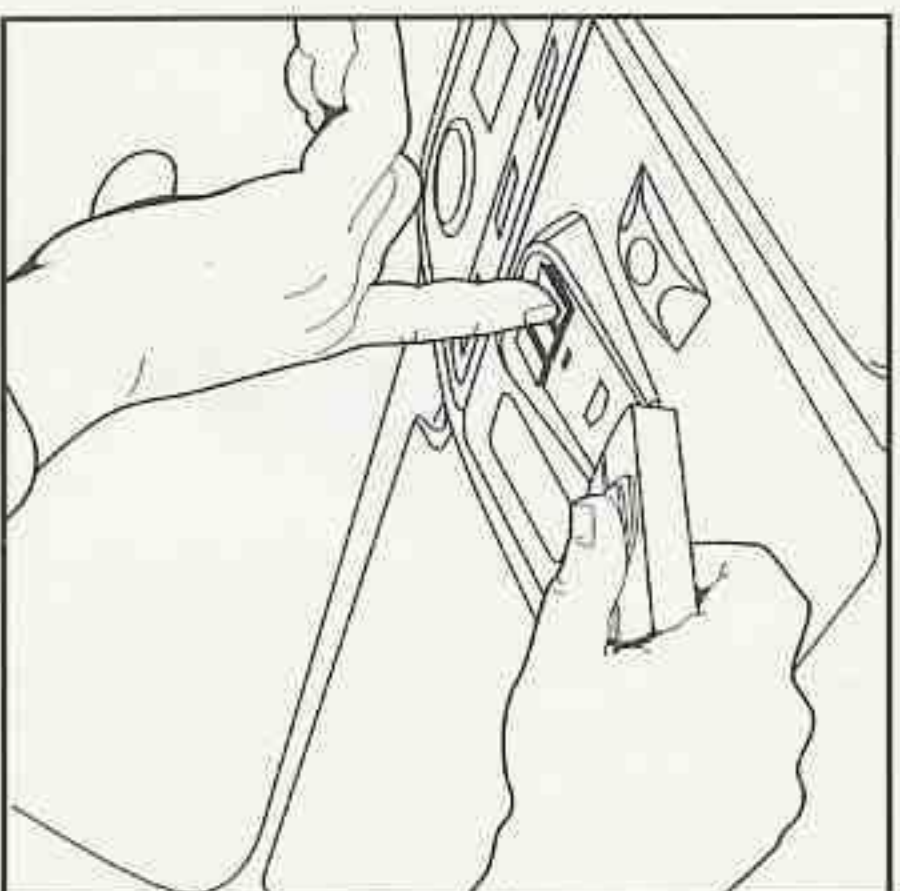

To program another button, repeat steps 3 through 5 only.

### Note to Canadian residents:

During programming, your hand-held transmitter may automatically stop transmitting. Continue to hold the Universal Transmitter channel (note steps 2 through 5 in the **Programming** section) while you press and re-press (cycle) your hand-held transmitter every two seconds until the frequency signal has been learned (the indicator light will flash first slowly and then rapidly).

### Operating the BMW

#### Universal Transmitter

Once it is programmed, the BMW Universal Transmitter can be used in place of your hand-held

transmitter(s). To operate, simply press the appropriate button on the Universal Transmitter. (The indicator light comes on while the signal is being transmitted.)

### If you have difficulty

#### programming the BMW Universal Transmitter

Be sure to read and follow the five programming steps precisely. You may want to execute the procedures a couple of times. If after repeated attempts you still cannot program the BMW Universal Transmitter, check these important details:

- Make sure the batteries in your hand-held transmitter are not dead. Replace them if necessary.
- Hold the hand-held transmitter against the BMW Universal Transmitter, in the exact position described in step 3.
- Hold both buttons for the duration of the programming without interruption.
- For best results, place the end that is opposite the battery compartment against the BMW Universal Transmitter when programming.

If you still have difficulties in programming after following these suggestions, call toll-free for assistance: **1-800-355-3515**.

**Note:**

Rolling code garage door openers which are "code protected" and manufactured after 1996, can be determined by the following:

- Referencing the garage door opener owner's manual.
- If the hand-held transmitter appears to program the BMW Universal Transmitter but does not activate the garage door.
- Pressing the trained Universal Transmitter button. If the indicator light flashes rapidly and then turns solid after approximately three seconds, the garage door has the rolling code feature.

**Training a Rolling Code Garage Door Opener**

To train your rolling code garage door opener to operate from your BMW Universal Transmitter, follow these steps (The aid of a second person may make the training quicker and easier.):

1. Locate the training button on the garage door opener receiver. Exact location and color of the button may vary by garage door opener brand. If there is difficulty locating the training button, reference the garage door opener manual or call **1-800-355-3515**.
2. Press the training button on the garage door opener receiver for two seconds.
3. Press the programmed BMW Universal Transmitter button for two seconds. Release the Universal Transmitter button and press the button again to complete the training.

Your garage door opener should now recognize your BMW Universal Transmitter. You may use either your BMW Universal Transmitter or your original hand-held transmitter to open your garage door.

If after following these suggestions you still have difficulties in programming your BMW Universal Transmitter, call toll-free for customer assistance: **1-800-355-3515**.

**Erasing Channels**

To erase all three programmed channels, hold down the two outside buttons until the indicator light begins to flash. Release both buttons.

**Accessories**

Accessories for your BMW Universal Transmitter are available from the manufacturer of the device. If you would like additional information or would like to purchase other accessories such as home lighting products that can be operated by the BMW Universal Transmitter, please call toll-free: **1-800-355-3515**.

**Precautions**

When programming your Universal Transmitter, you will be operating the garage door or gate. Be sure that people and objects are out of the way to prevent potential harm or damage.

Because the ignition must be on in the second position to operate the BMW Universal Transmitter, **DO NOT** program while in the garage.

Do not use this BMW Universal Transmitter with any garage door opener that lacks safety "stop" and "reverse" features as required by federal safety standards, (this includes any garage door opener model manufactured before April 1, 1982). A garage door opener which cannot "detect" an object in the path of a closing garage door and then automatically "stop" and "reverse" the door, does not meet current federal safety standards. Using a garage door opener without these features increases risk of serious injury or death. For more information on this matter, call toll-free: **1-800-355-3515**.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

DOC: ISTC 1763 K1313

Prince MODEL/FCC ID: CB2 V67690

Part Number: 01 00 1 469 135

**CUSTOMER ASSISTANCE**

**1-800-355-3515**